


Transmit Unit with three Bi-directional Data Channels and two Uni-directional Alarms for a Singlemode Fibre Link

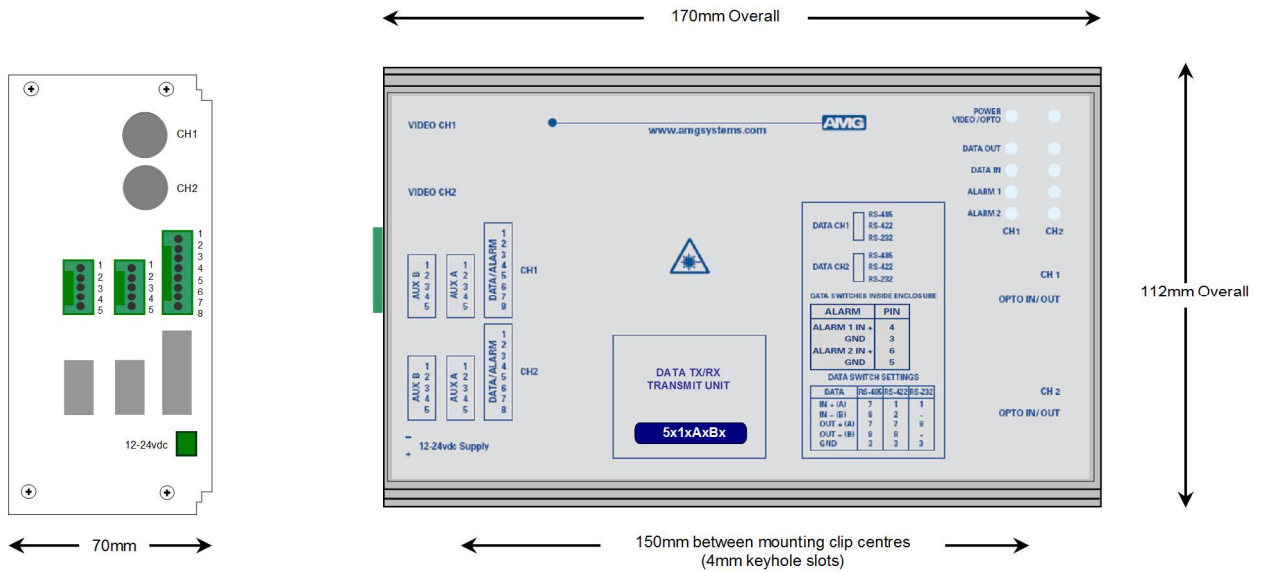

The **AMG5515A1B1** is a standalone transmit unit designed to transmit two Uni-directional alarms, and transmit & receive 3 data signals Bi-directional data signals over a Singlemode optical fibre.

The **AMG5515A1B1** is designed to be powered using an **AMG2001** standalone power supply.

The **AMG5515A1B1** is designed to operate with an **AMG5516A1B1** / **AMG5516A1B1R** receive unit in a point to point configuration. The R suffix in the partno. indicates a rackmount configuration.

Contents


Introduction	3
Unit Functional Schematic.....	3
Optical Connection	3
Connections	4
Optical Connections Singlemode	4
Power Connection	4
Data and Alarm Channel Connections	4
Front Panel Indicators	5
Power / Opto LED.....	5
Low Speed Data LEDs	5
Auxiliary Data LEDs.....	5
Alarm LEDs.....	5
Data and Alarm Channel Configuration	7
Data Channel Configuration	7
Data Interface Connections	8
Alarm Channel Configuration	8
Alarm Interface Connections	8
Auxiliary RS-422/RS-485 Data Channel Configuration	9
Data Interface Connections	10
Physical Information	11
Dimensions	11
Mounting Details	11
Safety	11
Maintenance and Repair	11

Introduction

Unit Functional Schematic

The **AMG5515A1B1** transmits 3 data signals and 2 Uni-directional alarms to the **AMG5516A1B1** receive unit.

It also receives 3 data signals transmitted from the **AMG5516A1B1**.

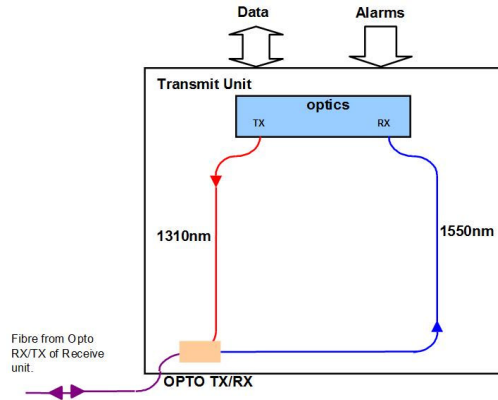

Optical Connection

The **AMG5515A1B1** connections are illustrated in the following example which shows an **AMG5515A1B1** transmit unit together with an **AMG5516A1B1** standalone receive unit configured as a single channel point to point system.



Connections

Optical Connections Singlemode

No. of Optical Connections 1
Optical Fibre Singlemode
Connector SC/PC

Primary Optical Launch Power -10dBm
Transmit Wavelength 1310nm

Primary Optical Sensitivity -30dBm
Receive Wavelength 1510nm

Minimum Optical Dynamic Range 20dB.

Power Connection

Connector Type Removable 2-pin, 3.81mm, Screw Terminal
Connector Partno. Phoenix 1803578
Supply Voltage +12 to +15 Volts DC
Maximum Power 5 Watts

Data and Alarm Channel Connections

No. of Data Channels One switchable RS-232 / RS-422 / RS-485
No. of Data Channels Two selectable RS-422 / RS-485
No. of Alarms 2

Connectors Removable 5-pin, 8-pin, 2.5mm, Spring Terminal
Connector Partnos. Phoenix 1881354, 1881383

Data Interface 1: RS-232, RS-422 or RS-485. Selected by slide switch inside enclosure. *See appropriate section on how to remove the case for access to the data switches

RS-485 – Switch Position - Top
RS-422 – Switch Position - Middle
RS-232 – Switch Position - Bottom

Data Interfaces 2&3: RS-422 or R-S485. Options Selected by DIL switch inside enclosure. *See separate Datasheet for Additional Data Interface Settings with the data switches

Alarm inputs Contact Closure pull-up is 330R to +3V3

Front Panel Indicators

Power / Opto LED

Power / Opto.....	Green	-	Unit powered, Opto sync.
	Red	-	Unit powered, no Opto sync.
	Off	-	No power applied to unit

Low Speed Data LEDs

Data Present IN (RS485 or RS422)	Green	-	logic zero (+V, -V) present on IN+, IN-
	Red	-	logic one (-V,+V) present on IN+, IN-
	Off	-	tri-state off or no connection on IN+, IN-

Data Present IN (RS232)	Green	-	logic zero (+V) present on input IN+
	Red	-	logic transitions present on input IN+
	Off	-	logic one (-V) present on input IN+

IN corresponds to the data signals being transmitted onto the optical fibre.

Data Present OUT (RS485 or RS422)	Green	-	logic zero (+V,-V) present on OUT+, OUT-
	Red	-	logic one (-V,+V) present on OUT+, OUT-
	Off	-	tri-state off or no connection on OUT+, OUT-

Data Present OUT (RS232)	Green	-	logic zero (+V) present on OUT+
	Red	-	logic transitions present on OUT+
	Off	-	logic one (-V) present on OUT+

OUT corresponds to the data signals being received from the optical fibre.

Auxiliary Data LEDs

Data type depends on AMG system: RS-232, RS-422, RS-485, 20mA,TTL, or FTT-10A

Data Present IN	Green	-	Data channel present but not transmitting
	R/G	-	Data channel transmitting
	Off	-	Data channel not present or no connection

IN corresponds to the data signals being transmitted onto the optical fibre.

Data Present OUT	Green	-	Data channel present but not transmitting
	R/G	-	Data channel receiving
	Off	-	Data channel not present or no connection

OUT corresponds to the data signals being received from the optical fibre.

Alarm LEDs

Channel 1

ALARM 1 IN.....	Green	-	Alarm ON / Contacts closed.
	Off	-	Alarm OFF / Contacts open.

ALARM 2 IN.....	Green	-	Alarm ON / Contacts closed.
	Off	-	Alarm OFF / Contacts open.


Channel 2

ALARM 1 IN.....	Green	-	Alarm ON / Contacts closed.
	Off	-	Alarm OFF / Contacts open.
ALARM 2 IN.....	Green	-	Alarm ON / Contacts closed.
	Off	-	Alarm OFF / Contacts open.

Data and Alarm Channel Configuration

The **AMG5515A1B1** transmit unit sends and receives data to/from an **AMG5516A1B1** or rackmount equivalent **AMG5516A1B1R** receive unit. The physical data interface RS-485, RS-422 or RS-232 is selectable by the user with the slide switch mounted on the main PCB inside the enclosure.

There are also 2 uni-directional alarm inputs provided, each alarm input is typically connected to a contact closure switch.

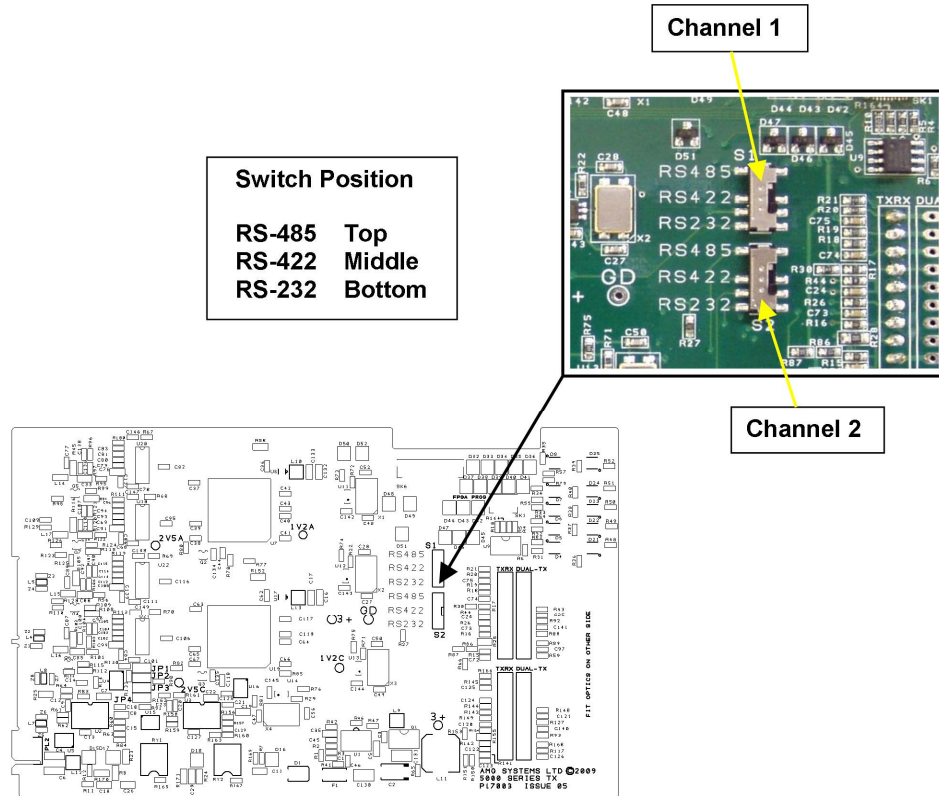

Data Channel Configuration

Each low speed data channel provides an RS-232, RS-422 (full duplex, four wire) or RS-485 (half duplex, two wire) interface defined by the corresponding mode switch inside the enclosure. Every data channel as shipped from the factory is set up for RS-485 operation unless otherwise requested.

The data input for both the RS-485 and the RS-422 modes detects a tri-state input condition by monitoring the differential voltage level across the input. A differential level below 600mV positive or negative will be detected as a tri-state condition. A level above 600mV positive or negative will be detected as a logic 1 or logic 0 respectively. It is important therefore to terminate the RS-485 bus or the RS-422 input bus using 120Ω if a pre-bias is present on the RS-485 or RS-422 bus.

A large number of third party equipment manufacturers apply a pre-bias on their RS-485 bus. This pre-bias is applied by pulling one arm of the RS-485 bus high (+5 volts) and the other arm low (0 volts) using high value resistors within the third party equipment. In order to ensure that the AMG equipment detects a tri-state condition, then these resistors should have a value above 5kΩ. If the third party bias resistors are less than 750Ω the bus can be multiple terminated as required to ensure that a tri-state level is detected.

The system detects a tri-state input condition on the data channel bus when in RS-485 or RS-422 mode.

Data Interface Connections

Connector Pin No.	Data Channel		
	RS-485 [switch top]	RS-422 [switch middle]	RS-232 [switch bottom]
1		IN + (A)	IN
2		IN - (B)	
3	GND	GND	GND
4			
5			
6			
7	IN/OUT + (A)	OUT + (A)	
8	IN/OUT - (B)	OUT - (B)	OUT

Note: (A) or (B) in brackets in the above table refers to RS-485 / RS-422 data specification.

Alarm Channel Configuration

The **AMG5515A1B1** provides 2 uni-directional alarm / contact closure inputs. Each alarm input is typically connected to a contact closure switch.

Each ALARM IN+ input incorporates a 330R pull-up resistor to the internal +3V3 supply.

Alarm Interface Connections


Connector Pin No.	Alarm Interface	
	Alarm 1	Alarm 2
1		
2		
3	ALARM 1 GND	
4	ALARM 1 IN +	
5		ALARM 2 GND
6		ALARM 2 IN +
7		
8		

Auxiliary RS-422/RS-485 Data Channel Configuration

The **AMG5515A1B1** transmit unit sends and receives RS-422/RS-485 data to/from an **AMG5516A1B1** or rackmount equivalent **AMG5516A1B1R** receive unit.

Each auxiliary data channel is provided by an X04057 RS-422/RS-485 Daughter Board. These are used when additional RS-422 or RS-485 data interfaces are required and provides two bi-directional RS-422 or RS-485 data channels.

The X04057 daughter board is pre-configured at manufacture using the multiway 8-way DIP switch JP3. It is set to RS-485 mode by default. This switch is not usually accessible by the user, and the following instructions are for INFORMATION only.

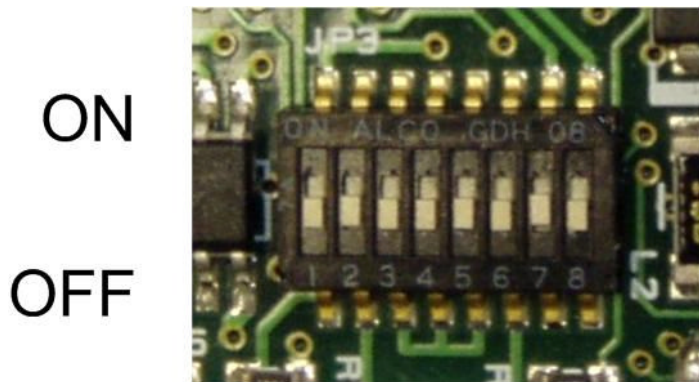

The switch functions are as follows: Default (RS-485) settings are shown in the last column.

SW. No.	Function	RS-422	RS-485	DEFAULT
1.	Mode Selection - PCB Identification	Off	On	On
2.	390Ω RX- Pre-bias to +5V. Note when off, the pre-bias is set at 10kΩ to +5V.	Off	On	Off
3.	390Ω RX+ Pre-bias to gnd. (note when off pre-bias set at 10kΩ to GND)	Off	On	Off
4.	120Ω RX termination	Off	On	Off
5.	RX+ connected to TX+	Off	On	On
6.	RX- connected to TX-	Off	On	On
7.	TX data enabled from logic one on the data stream. TX output tri-state after 5μs of a logic zero. See Note 1.	Off	On	On
8.	RX data disabled when TX enabled	Off	On	On

Note 1: Resistor R7 = 1kΩ for 5μS Tx dwell time. (10kΩ for 50μs)

The switches are used as follows:

SW. No.	4 Wire RS-422 Point to Point	4 Wire RS-422 Bussed	DEFAULT 2 wire RS-485
1.			On
2.			
3.			
4.			
5.			On
6.			On
7.		On	On
8.			On

Additional 120Ω Termination	Additional High Bias
	On
	On
On	

Data Interface Connections

Connector Pin No	RS-422	RS-485
1	OUT + (A)	IN/OUT + (A)
2	OUT - (B)	IN/OUT - (B)
3	GND	GND
4	IN + (A)	IN/OUT + (A)
5	IN - (B)	IN/OUT - (B)

Physical Information

Dimensions

Height 112mm
Width 170mm (excluding connectors)
Depth 70mm
Weight 600grams

Mounting Details

The AMG unit is supplied with a clip-on mounting bracket which should be attached to a panel or wall using 2 off 4.0mm screws, see diagram on page 1 for dimensions. The unit is clipped into the mounting bracket, and is then held firmly in position.

Safety

AMG Optical Fibre Products use Class 1 laser systems in accordance with EN 60825-2:2000.

It is always advisable to follow good practice when working with optical fibre systems. This includes:

- Do not stare with unprotected eyes or with any unapproved collimating device at fibre ends or connector faces, or point them at other people.
- Use only approved filtered or attenuating viewing aids

For other safety issues and advice on good practice associated with optical fibre systems, please see EN 60825-2:2000 or your local safety officer.

Maintenance and Repair

There are no user serviceable parts within AMG products. See unit data sheet for full specification. In case of problem or failure, please call your local support centre or contact: **AMG Systems Ltd.** at 3 The Omega Centre, Stratton Business Park, Biggleswade, Beds., SG18 8QB, UK.

Phone	+44 (0) 1767 600 777
Technical Support	+44 (0) 1767 604 491
Email	techsupport@amgsystems.com

This page is intentionally blank.